

Dear Customer,
Congratulations!

Welcome to the wonderful Prestige family.

Thank you for buying Prestige Hand blender.

Prestige Hand Blenders are carefully manufactured, tested and packaged so as to give you trouble-free performance. After all, it is from Prestige - a trusted name in kitchen appliances for generations in India with customers countrywide.

We are sure your Prestige Hand Blender will add a touch of class and convenience to your kitchen!

Your Prestige Hand Blender comes with a One year warranty. Please ensure that you post / mail your Customer Response Card within 7 days from the date of purchase to enable us to register your product.

Please read the instructions in the manual carefully, before use.

IMPORTANT SAFEGUARDS

When using your electrical appliances, basic precautions should always be followed including the following:

NOTE: When using the hand blender, the unit must not be used for longer than 2 minutes at a stretch, as this puts pressure on the motor which leads to overheating and product malfunction. It is recommended to allow the blender one minute break after each 2 minutes cycle.

1. Read all instructions.
2. Make sure the input voltage corresponds to the one indicated on the appliance's specification sticker.
3. Use the hand blender only for intended use as described in the instruction manual.
4. Unplug the hand blender from the power outlet when not in use
5. Do not let the power cord hang over edges of tables or counter, or touch hot surfaces.
6. Avoid coming into contact with moving parts. Keep hands, hair, clothing and other utensils away from blade during operation to prevent injury and/or damage to the hand blender and chopper attachment.
7. Do not use hard objects (spoon, knife, or fork) on the turning beaters. Also, do not touch turning blade with hands.
8. Always wait until the blades have completely stopped before removing them from the hand blender and chopper attachment.
10. Do not immerse unit, plug or cord in water, or allow for liquid to come in contact with any of the electrical parts
11. Close supervision is necessary when the appliance is used near children.
12. Operate the hand blender and chopper attachment on a smooth & level surface.
13. Never operate the hand blender and chopper attachment with a damaged power cord or plug, or after it has fallen or been damaged in any manner. Handover the appliance to the nearest Prestige Regional service centre/Authorized service centre for examination, repair or service.
14. If the power cord is damaged, it must be replaced by Prestige Regional service centre/ authorized service centre.

15. This hand blender should be used for domestic purposes only.
16. To disconnect, hold the plug and pull from wall outlet. Never pull the cord.
17. Do not try to cover, extend or stretch the mains cable.
18. Do not attempt to open any part or dismantle the controls.
19. To reduce the risk of electrical hazards, it is recommended not to use an extension cord.

Save these instructions


FOR MODELS PHB 5.0 AND PHB 6.0

1. Take the hand blender out of the box and take off any protective wrappings.
2. Before first use, the detachable stem should be cleaned with moist cloth or rinsed under the tap. Make sure the unit is unplugged before doing this.
3. Attach the detachable stem to the motor in a clockwise direction.
4. Ensure the hand blender is unplugged while attaching the stem.
5. Put the ingredients into the blending jar provided or a different durable jar, which is sufficiently tall to avoid splashing.
6. Plug the unit into the power outlet.
7. Dip the detachable stem with blade as deep as possible into the blending jar.
8. Press and hold on to the required speed button to operate the unit.
9. Operate the stick blender through the ingredients with a gentle up and down movement.

NOTE: Do not operate the hand blender before inserting it into the container.

10. When you have finished using your stick blender, unplug the appliance and remove the detachable stem by holding the motor and turning the detachable stem in anti-clockwise position.
11. Clean the unit and the attachments thoroughly.

KNOW YOUR PRESTIGE HAND BLENDER

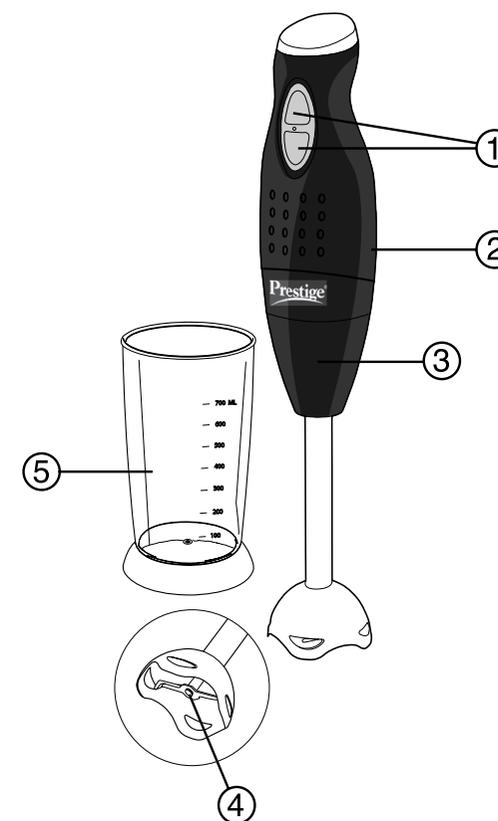


1. Switch
2. Body (Motor Unit)
3. Detachable Stem
4. Blade
5. Blending Jar

Model No : PHB 5.0

Technical Specification :

Power Consumption : 230V 50 Hz 200W

KNOW YOUR PRESTIGE HAND BLENDER

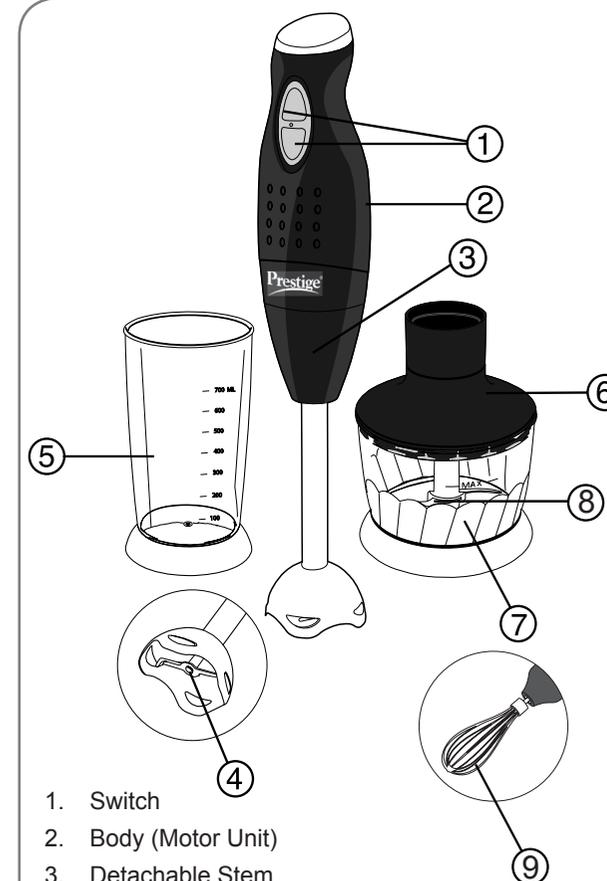

1. Switch
2. Body (Motor Unit)
3. Detachable Stem
4. Blade
5. Blending Jar
6. Chopper Lid
7. Chopper Bowl
8. Chopping Blade
9. Whisk Attachment

Model No : PHB 6.0

Technical Specification :

Power Consumption : 230V 50 Hz 200W

USING CHOPPER ATTACHMENT

Only For Model PHB 6.0

This accessory is used to chop meat, vegetables and similar mixtures of foodstuff.

NOTE: This accessory is for light duty chopping only.

1. Select a flat, stable surface.
2. Make sure the unit is unplugged.
3. Attach the chopper lid to the motor in clockwise direction.
4. Place the blade into the chopper bowl. Make sure it is in place by putting the lid on and turning it by hand. Do not touch the blade edges by hand as it can cause injury.
5. Remove the lid of the chopper bowl and add the ingredients into the chopper bowl. Pre-cut larger parts into smaller pieces of even size. Do not fill the bowl more than half.
7. Plug the hand blender into the electrical outlet.
8. Press and hold the switch.

For a fine consistency press the switch continuously. For a coarse consistency press and release the switch periodically. (Caution - Do not operate the hand blender continuously for more than two minutes)

USING WHISKING ATTACHMENT

Only for Model PHB 6.0

This accessory is used to whip eggs, cream, prepare milkshakes, lassi etc.

NOTE: This accessory is for light duty whisking only.

1. Select a flat, stable surface.
2. Make sure the unit is unplugged.
3. Attach the whisking attachment to the motor unit in clockwise direction.
4. Put the ingredients into the blending jar provided or a different durable jar, which is sufficiently tall to avoid splashing.
5. Plug the unit into the power outlet.
6. Dip the whisk as deep as possible into the blending jar.
7. Press and hold the switch.

For a fine consistency press the switch continuously. For a coarse consistency press and release the switch periodically. (Caution - Do not operate the hand blender continuously for more than two minutes)

CLEANING & MAINTENANCE

NOTE: Use extreme care when handling the chopping blade. Do not touch the blades with your fingers. The blades are very sharp and can cause injury if touched.

- Make sure the unit is unplugged from the main power supply.
- Disconnect the detachable stem from the motor unit.
- It is much easier to clean the accessories immediately after their use. Wash them in warm, soapy water, rinse and dry well.
- The bowl must be washed with luke warm water.
- The body of the hand blender can be cleaned with a damp cloth, and must be wiped off with a dry cloth.
- To remove stubborn spots, wipe the surfaces with a piece of cloth slightly dampened in soapy water or a mild non-abrasive cleaner. Follow with a clean damp cloth.
- Do not use any abrasive cleaner or material to clean any part of the hand blender, as it will harm the exterior of the hand blender.
- Always keep the unit/ stem in vertical position after cleaning, never keep it in horizontal position

CAUTION: The stick blender motor unit and chopper lid with gear should never be submerged in water or held under a running tap. To clean, simply wipe with a damp cloth.

TERMS OF WARRANTY

Prestige {hereinafter referred to as the Company} warrants to the purchaser of iPrestige Hand Blender, {hereinafter referred to as hand blender} that the said Hand Blender is free from all defects in material and workmanship.

This warranty is valid for a period of one year from the date of original purchase, subject to the following terms and conditions:-

- 1) The warranty card is to be completed, signed by the dealer immediately on purchase.
- 2) The Hand Blender is only to be serviced by the Company Regional Service Centre or by its Authorised Service Centre (addresses listed in this manual).

- 3) The customer shall carry the Hand Blender to the nearest Company Regional Service Centre / Authorised Service Centre at his/her own cost and risk.
- 4) The Company shall make all endeavours/attempts to carry out the Service/Replacement under this Warranty at the earliest, but shall not be liable to do so within any specified time.
- 5) The Warranty will continue and remain in force only for the unexpired period of the original Warranty, in regard to the Repair/Replacement of parts of the Hand Blender.
- 6) The Hand blender shall be used strictly for domestic purposes in accordance with the user's manual.
- 7) The Company shall not be held liable for any accident, loss or damage (direct or indirect) to person or property caused by reason of:
 - a) Repairs/Service attended by unauthorised service person.
 - b) Over-loading/Misuse/abuse or/and negligence on the part of the person.
 - c) Defects caused by improper/reckless use.
 - d) Use of spurious spares/old, non-genuine spares.
 - e) Failure to comply with any safety precaution or maintenance tip suggested by the Company.
 - f) Original serial number is deleted/defaced or altered.
- 8) The Company shall not be responsible for any special consequential damages or loss arising directly or indirectly for any delay in the performance of this Warranty.
- 9) The Company reserves the right to retain any part or component at the Regional Service Centre / branches or Authorised Service Centre or at its workshop and shall effect Repairs/Replacement or parts or components at its sole discretion.
- 10) This Warranty shall not in any case extend towards payment or any monetary consideration whatsoever, and shall be only limited to the product replacement.
- 11) Electrical parts are not covered under the warranty terms as they are subject to wear and tear. Replacement of these parts is chargeable.
- 12) Electrical appliances, wire points need regular check up by an authorised service person.
- 13) Electrical appliances are prone to voltage fluctuation risks, therefore precaution should be taken before use. Company shall not be responsible for any damage to electrical parts, arising out of this problem.
- 14) For repairs after the expiry of the warranty period, the authorised service centre will levy a charge (based on the MRP) for the component replaced.
- 15) The decision of the company is final in all cases of complaints.
- 16) Any complaints/disputes shall be within the jurisdiction of the Courts of Bangalore.

WARRANTY CARD (CUSTOMER'S COPY)

This page has to be treated as a full fledged warranty card and is required to be maintained by you. You will be required to produce this while claiming the service within the warranty period. In the unlikely event that a defect should develop in the Electric Kettle during the period of this warranty, the product should be delivered at your cost to the Authorised Service Centre or Authorised Service Dealer along with this warranty card.

Date of purchase :

Serial No:

Prestige Electric Kettle :

Model: PHB 5.0

PHB 6.0

Name: _____

Address: _____

Dealer's Stamp and Address

REGIONAL SERVICE CENTRES

SOUTH ZONE

TTK Prestige Limited
Old No. 17-A, New 18, Baliah Avenue (behind bank of India) Mylapore, **CHENNAI-600 004**.
Ph: 044-42074351, 42312535.

TTK Prestige Limited
K S R Building, Plot No.8,9,10, Ramamurthy Nagar, Next to Laxmi Service Station, Chintamani, Karur Bye Pass Road, **TRICHY-2**.
Ph:0431-270 1384

TTK Prestige Limited
VRK Chambers, 198 & 198/1, 4th Cross, Lalbagh Road, **BANGALORE - 560 027**.
Ph: 080-2229 6922.

TTK Prestige Limited
XXXV /1953, 1954, Mareena, Bldg., M.G. Road, Raviapuram, Emakulam, **COCHIN : 682 016**.
Ph: 0484-2359422 / 2359189

TTK Prestige Limited
3-6-751, Sai Sadan, Street No.12, Beside Autofin showroom, Himayath Nagar, **HYDERABAD-500 012**. Ph: 040-27601649

TTK Prestige Limited
69-1-1, Patamata, **VIJAYAWADA - 520 010**.
Ph:0866-247 6237 / 247 5965

WEST ZONE

TTK Prestige Limited
G-Wing Ground Floor, Tex Centre, Narayan Properties, Chandivili Road, Andheri East, **MUMBAI - 400 072**. Ph: 022- 2847 8146

TTK Prestige Limited
Purva Plaza, Dyan Prabodhini, Sadashiv Peth, **PUNE - 411 030**.

TTK Prestige Limited
C/o. Abishek Enterprises, 339, Shivaji Nagar, **INDORE - 452 003**. Ph: 0731-2537538

TTK Prestige Limited
807, Mahakant Opp. V.S Hospital, Ellis Bridge, Ashram Road, **AHMEDABAD - 380 001**.
Ph: 079 -26575241 / 26575949

NORTH ZONE

TTK Prestige Limited
No.36, DLF Industrial Area, Kirti Nagar, (Opp. Fun Cinema), **NEW DELHI - 110015**.
Ph: 011 - 25103163/25442411

TTK Prestige Limited
C/o Zurich India, B-11, Meerut Road Industrial Area, **Ghaziabad, UP**. Ph 4372938 / 39

TTK Prestige Limited
270, Model Gram, Mawla School Road, **LUDHIANA - 141 001**. Ph: 0161-2770253

TTK Prestige limited
B -2, Status Enclave, D-241, Devi Marg, Bani Park, **JAIPUR - 302002**, Ph: 0141 - 2205997.

EAST ZONE

TTK Prestige Limited
30, 1st Floor, Ganesh Chandra Avenue, **KOLKATTA-700 013**. Ph: 033-2215 3029

TTK Prestige Limited
C/o Ragini Enterprises, Plot No.124, Road No.22, Srikrishna Nagar, **PATNA -800 001**.
Ph: 098352 38715

TTK Prestige limited
C/o Neelachal Agencies, Plot No.3195 'Anshumal' Professorepara, **CUTTACK - 753 003**.
Ph: 0671 - 2310522 / 2311743

TTK Prestige Limited
C/o. Sadhana Warehousing, Agencies Pvt Ltd., G S Road, Rukmanigaon, Dispur, **GUWAHATI - 781 022**.
Ph: 0361 - 2338570/2330359.

TTK Prestige Limited
C/o The Legend, Shop No.9, Jaiswal Complex, 508, Kashidih, Sakchi, **JAMSHEDPUR-831 001**.
Ph: 09431077983

Marketed by :
TTK Prestige Ltd.,

Plot No. 38, Sipcot Industrial Complex, Hosur - 635 126, INDIA.
Email: customercare@ttkprestige.com



SELECTED
Superbrand
INDIA 2009-10
CONSUMER VALIDATED

Hand Blender

USER'S MANUAL

MODEL : PHB 5.0



MODEL : PHB 6.0



A Product